
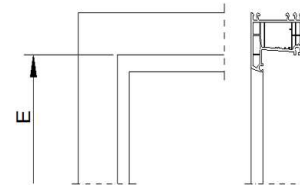


The fixing points and mounting distances, which are stated by the system provider, must be observed.

Transference of the forces which act perpendicularly to the window plane (wind load) and fixing distances

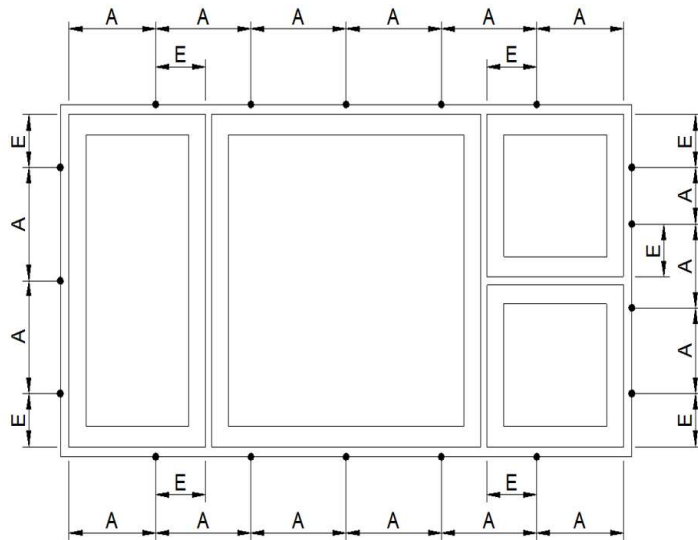

● = Fixing point

A = Distance of fixing anchor

Aluminum window - max. 800 mm

Wood window - max. 800 mm

PVC window - max. 700 mm

E = Distance from inner corner edge

Distance from the inner frame corner or from the inner profile of mullion and transom 100 to 150 mm

Transference of the forces in the window plane (own weight and live load)

Attention: static anchors have to be arranged as same as wedgings!

